Power-Pack for portable consoles



Quick charger 9,6V No.: 1.004.9750



No.: 1.004.9750 Contains: - Quick charger 9,6 V No.: 1.004.9730 - Battery box 9,6 V

- Quick charging battery


9,6 V/700 mAh No.: 1.004.9735

The battery charger is ready for use when the green LED shines. As soon as the battery is inserted into the charger, an evaluation of the battery temperature starts. If the temperature of the battery is too high or too low the red LED shines. The charger reduces the charging rate to a conservation level and the yellow LED flashes. As soon as the battery reaches the correct temperature – the red LED stops shining - the charging process starts. Steady light of the yellow LED indicates the charging process. Once the battery is fully charged, the charger reduces the charging rate to a conservation level. The yellow LED flashes. If the battery will not be used immediately it should remain in the charger on conservation charge.



Quick charging battery 9,6 V/700 mA

Hole measures for the battery box 9,6 V Built-in case

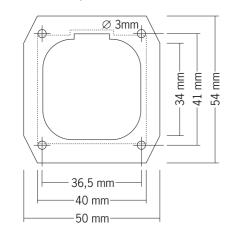

Technical Data

No.: 1.004.9735

Type of battery NC 9,6 V 700 mAh

Input voltage 230 V AC +/- 10 % with power-plug-connection

Charging time Approx. 3.5 h

Contacts Self cleaning (Cleaning the contacts isn't necessary)

Protective functions - Temperature error: Only conservation of charge - Short circuit: Interruption of the charging process.

LED plate



LEDs

Green LED on Ready for operation

Red LED on Temperature error

(Battery temperature too high or too low)

Yellow LED on Charge

Yellow LED flashes Conservation of charge